MYRATEC

TLD-1111-40

TV USER'S MANUAL

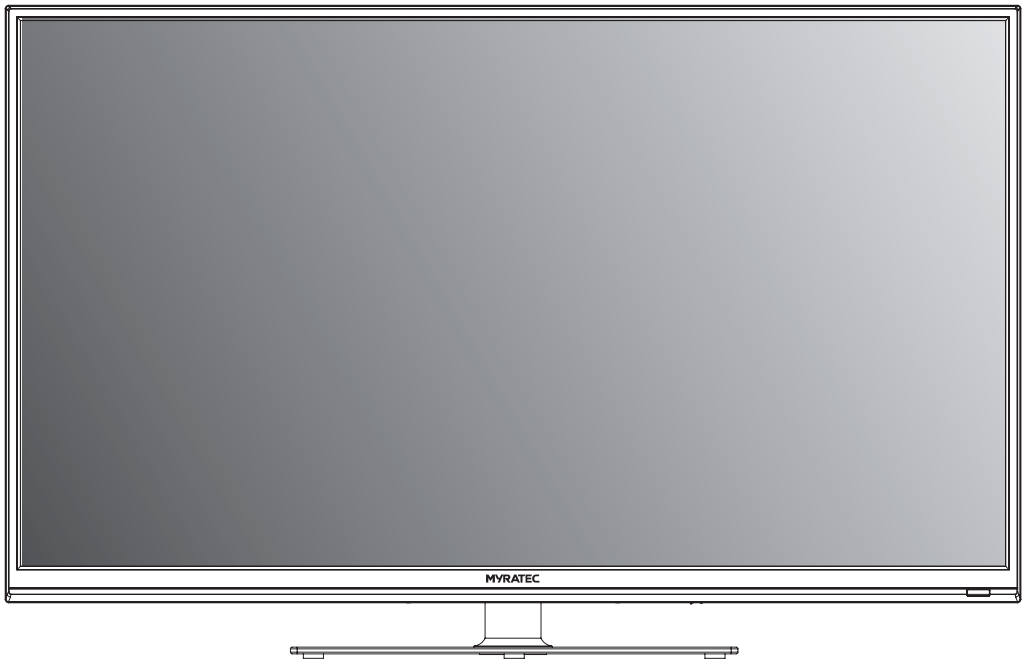

LEDTV

40" Wide Screen Digital LED TV

Index

1. INTRODUCTION 4

1.1. Safety Information 4

2. General View 10

2.1. Front Panel 10

2.2. Connection Panel 11

2.3. Remote Control 12

3. INSTALLATION 15

3.1. Power Supply Connection 15

3.2. RF Antenna Connection 15

3.3. Connecting via Composite HDMI 16

3.4. Connecting via VIDEO 16

3.5. Conecting via Component Video 17

3.6. Connect to Digital Audio Amplifier 17

3.7. Connecting to a PC 18

3.8. Connecting Headphones 18

4. INPUT SOURCE 19

5. FIRST TIME INSTALLATION 20

6. MAIN MENU OPERATION 22

6.1. DTV Channel Menu 22

6.2. Picture Menu 25

6.3. Sound Menu 27

6.4. Time Menu 28

6.5. Lock Menu 30

6.6. Setup Menu 31

6.7. EPG Menu 32

6.8. Record 33
6.9. ATV Channel Menu 34
6.10. Screen Menu 35

7. PLAYING MULTIMEDIA FILES 36

7.1. Photo Menu 37
7.2. Music Menu 38
7.3. Movie Menu 39
7.4. Text Menu 40

8. TROUBLESHOOTING 41

9. SPECIFICATIONS 42

1. INTRODUCTION

1.1. Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT

REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please, carefully study this manual and always keep it available. There are, however, some installation and operation precautions which you should be aware of:

1. READ INSTRUCTIONS: All the safety and operating instructions should be read before the product is operated.
2. RETAIN INSTRUCTIONS: The safety and operating instructions should be retained for future reference.
3. HEED WARNINGS: All warnings on the product and in the operating instructions should be adhered to.
4. FOLLOW INSTRUCTIONS: All operating and use instructions should be followed.
5. CLEANING: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. ATTACHMENTS: Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. WATER AND MOISTURE: Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub - in a wet basement or near a swimming pool and the like.
8. ACCESSORIES: Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or

sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care: Quick steps, excessive force and uneven surfaces may cause the product and cart combination to overturn.

9. VENTILATION: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCES: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

11. GROUNDING OR POLARIZATION: This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other).This plug will fit into the power outlet only one way. This is a safety feature .If you are unable to insert the plug fully into the outlet, try reversing the plug .If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. POWER-CORD PROTECTION: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at

plugs, convenience receptacles, and the point where they exit from the product.

13. PERCEPTIVE ATTACHMENT PLUG: The product is equipped with an attachment plug having overload protection. This is a safety feature. See instruction manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the technician service has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

14. OUTDOOR ANTENNA GROUNDING: If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

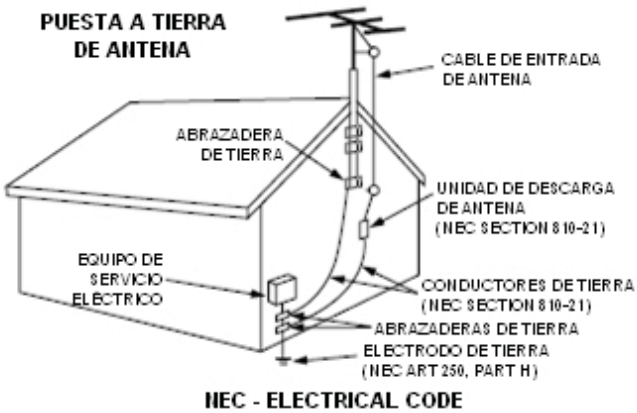

NEC - ELECTRICAL CODE

15. LIGHTNING: For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

16. POWER LINES: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. OVERLOADING: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

18. OBJECT AND LIQUID ENTRY: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19. SERVICING: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. DAMAGE REQUIRING SERVICE: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.

- When the product exhibits a distinct change in performance – this indicates a need for service.

21. REPLACEMENT PARTS: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. SAFETY CHECK: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that theproduct is in proper operating condition.

23. WALL OR CEILING MOUNTING: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24. HEAT: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

2. GENERAL VIEW

2.1. Front Panel

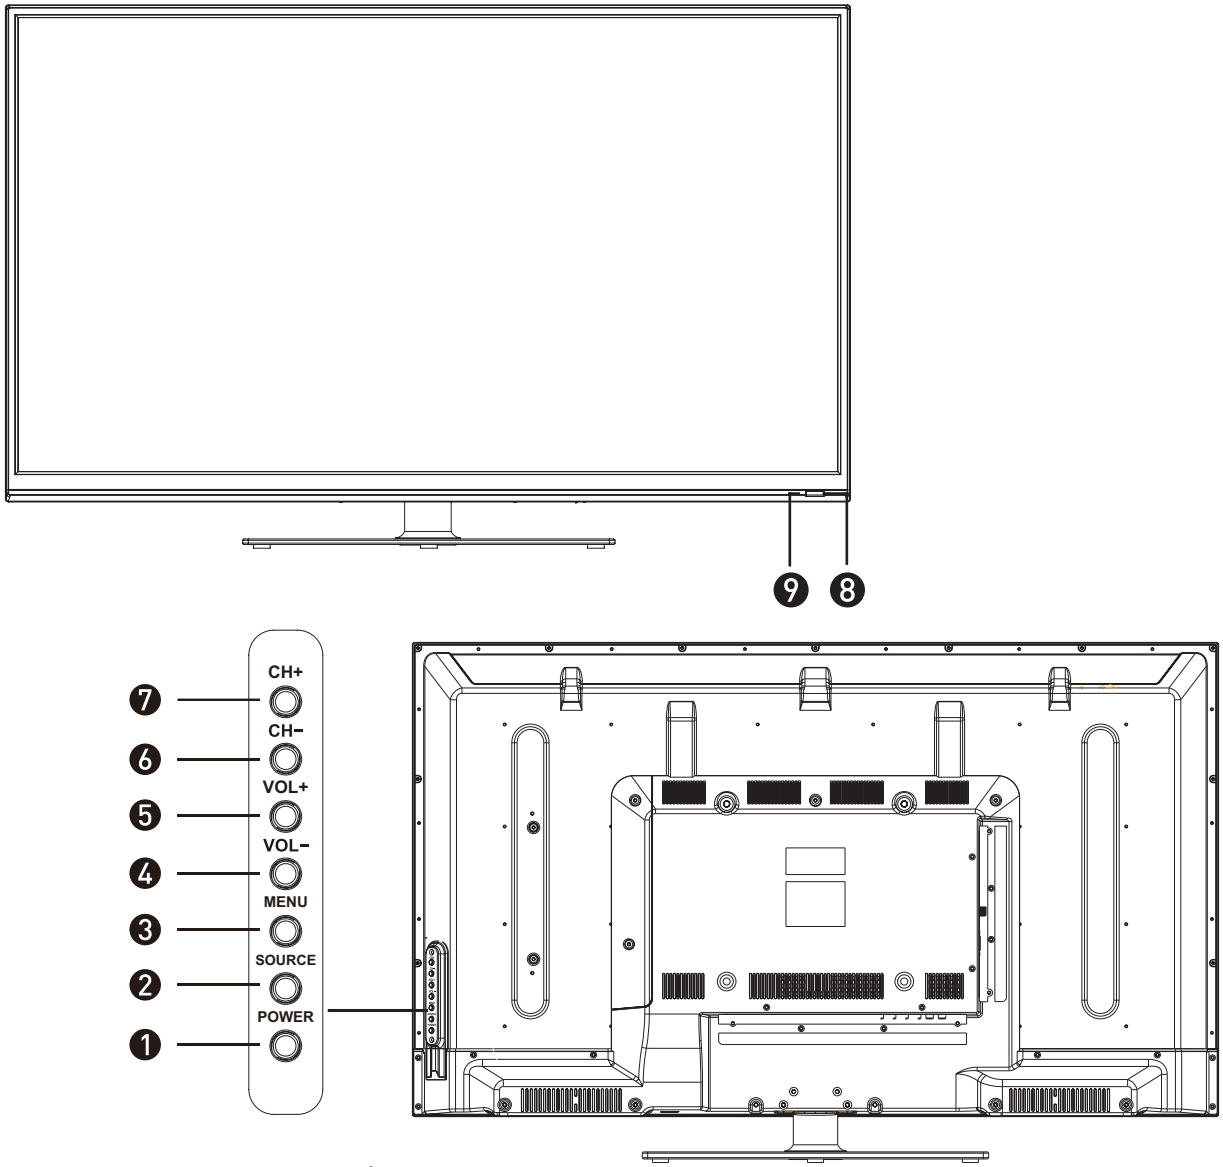

1. **POWER**: Turn on TV/Standby
2. **SOURCE**: Audio/video input source selection
3. **MENU**: Open settings menu
4. **VOL-**: Decrease volume
5. **VOL+**: Increase volume
6. **CH-**: Previous channel
7. **CH+**: Next channel
8. **IR RECEIVER**: Receives infrared signals from the remote control
9. **INDICATOR LED**: Status indicator (Power On: Green / Standby: Red)

2.2. Connection Panel

Rear View

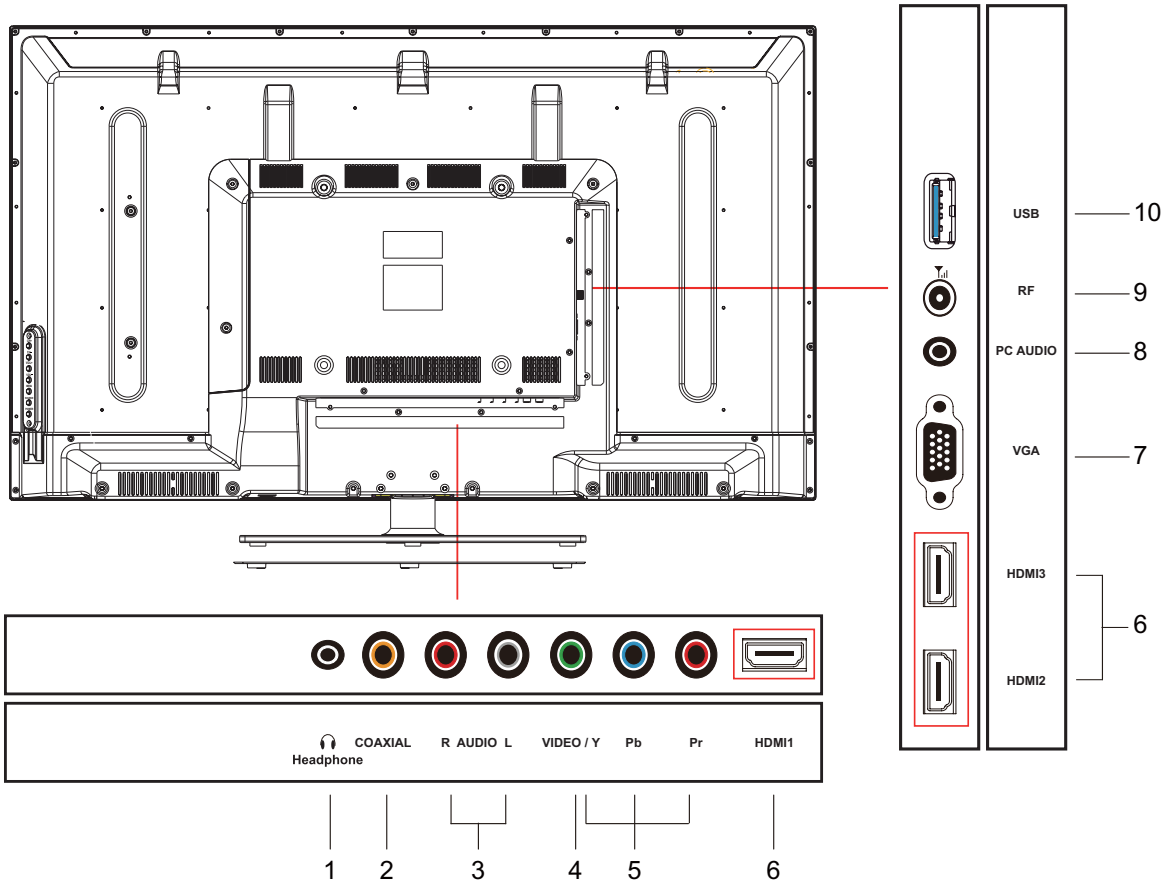

1. Headphone Jack
2. COAXIAL Output
3. Rear AV Input
4. VIDEO Jack
5. Component Input
6. HDMI Input
7. VGA Input
8. PC Input
9. 75 ohm Antenna Socket
10. USB

2.3. Remote Control

POWER: Turn on the TV/Standby

: Mute the device

P.MODE: Select the picture mode

S.MODE: Select the sound mode

ASPECT: Selects the screen size

MTS: Audio language selection

NUMBER KEYS: Change the channel directly

- For direct access a digital TV channel.
  (For an example, when access a digital TV channel number 5-1, press button "5" + "●" + "1")

: Return to the previous channel tuned

SLEEP: Auto Power Off Timer

EPG: Shows Eletronic Program Guide

REC: In DTV mode, Press REC button to start recording, perss ■ button to stop recording

COLOR BUTTONS: Shortcut from the current page to other pages

INFO: Show information about the current programme

SOURCE: Display the input source menu

MENU: Show Menu

EXIT: Exit the Menu

UP: Up

OK: Confirm

LEFT: Left

RIGHT: Right

DOWN: Down

V+: Increase volume

V-: Decrease volume

SUBTITLE: Subtitles selection

REPEAT: Repeat play

P+: Next Channel

P-: Previous Channel

FAV: Show the list of favorite channels

FAV-: Previous favorite channel

FAV+: Next favorite channel

CC: CC mode

CH LIST: Displays channel lists on the screen

FREEZE: Freeze the image

⏯: PLAY/PAUSE

⏪: Fast Rewind Playback

⏩: Fast Forward Playback

⏹: Stop playback

⏮: Previous file

⏭: Next file

Install the Bateries

Remove the lid of the battery compartment.on the back of the remote control unit by moving the lid.

Place two AAA batteries, 1.5V battery compartment respecting the polarity.

Do not mix new with old batteries or different types of batteries.

Replace the battery compartment cover by moving it until it clicks.

Important:

When replacing the batteries, take special care in disposing of used.respecting.the.rules.in.force. Please deposit used batteries in the place assigned to ensure they are recycled surely maintaining the environment. Do not burn or bury batteries.

Using the Remote Control Unit

Always point the remote control unit directly to the sensor on the front panel of the TV.

It should be a maximum of 7 meters distance and 30 degrees to the right or left of the IR receiver to work properly.

Important:

Do not leave the remote control unit in extremely hot or humid places.

3. INSTALLATION

3.1. Power Supply Connection

Connect the power cord to a home power outlet and to the connection panel in the back of the unit.

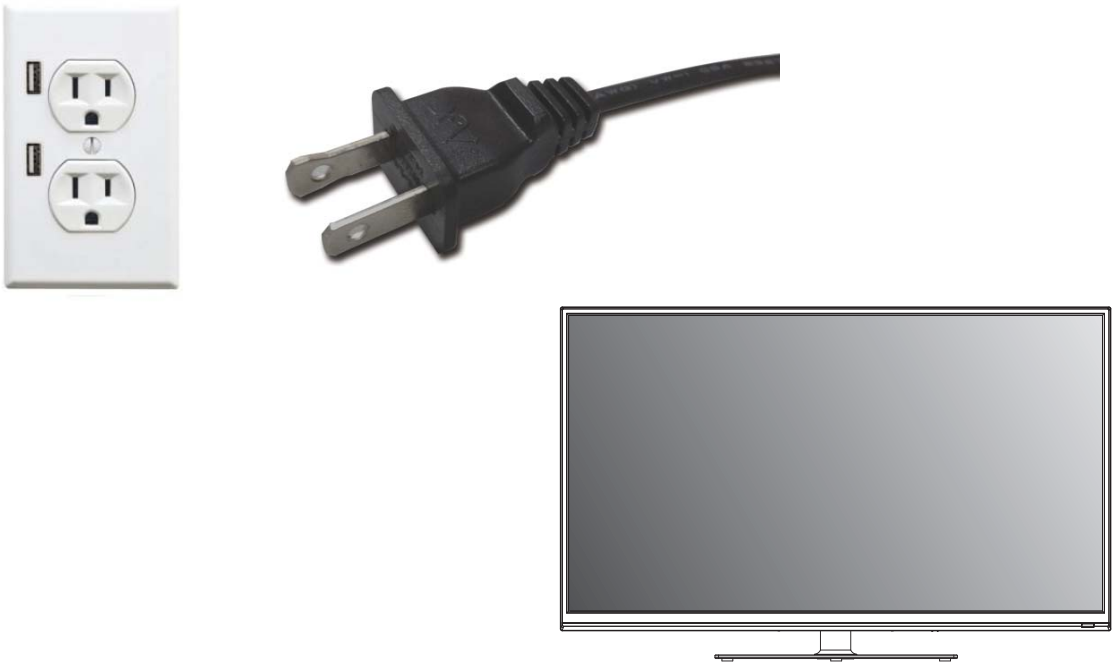

3.2. RF Antenna Connection

Connect the antenna as shown in the figure to receive the.analog or digital (DTV) TV signal.

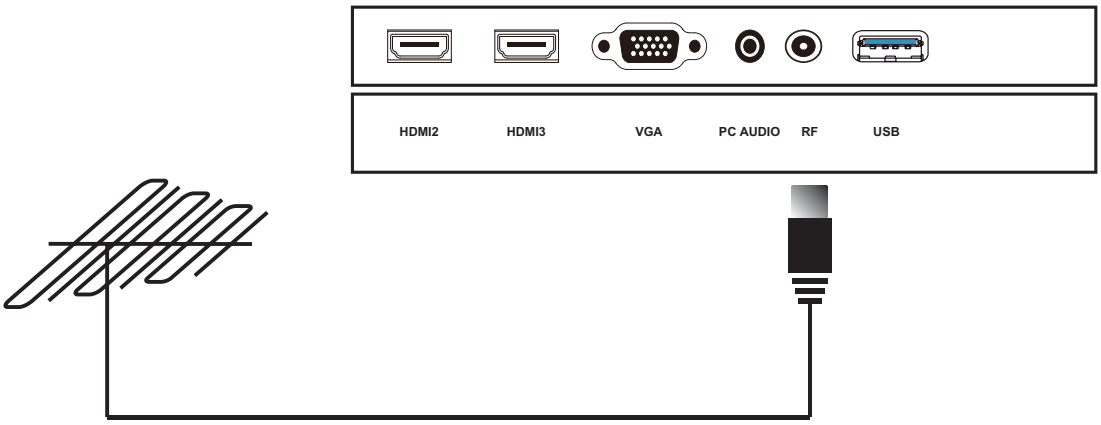

3.3. Connecting via HDMI

Connect your video player (VHS, Betamax, etc....), decoder, DVD or similar, with the corresponding HDMI cable from the HDMI output of your video equipment to the HDMI input on your TV, as shown in figure. This cable transfers HD video and audio.

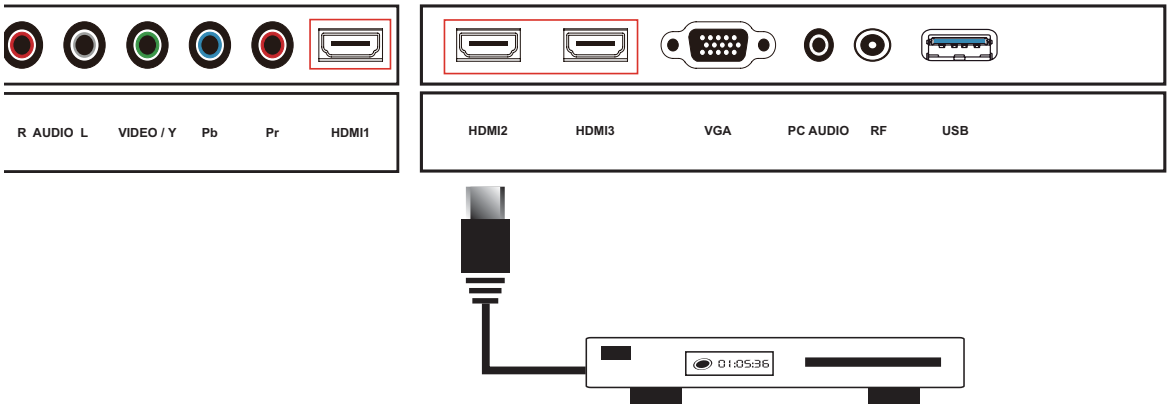

3.4. Connecting via Composite Video

Connect your video player (VHS, Betamax, etc.....), decoder, DVD or similar with the corresponding tri-color RCA cable, from the AV output (audio/video) of your video equipment to the video and audio inputs to your TV, as shown in the figure.

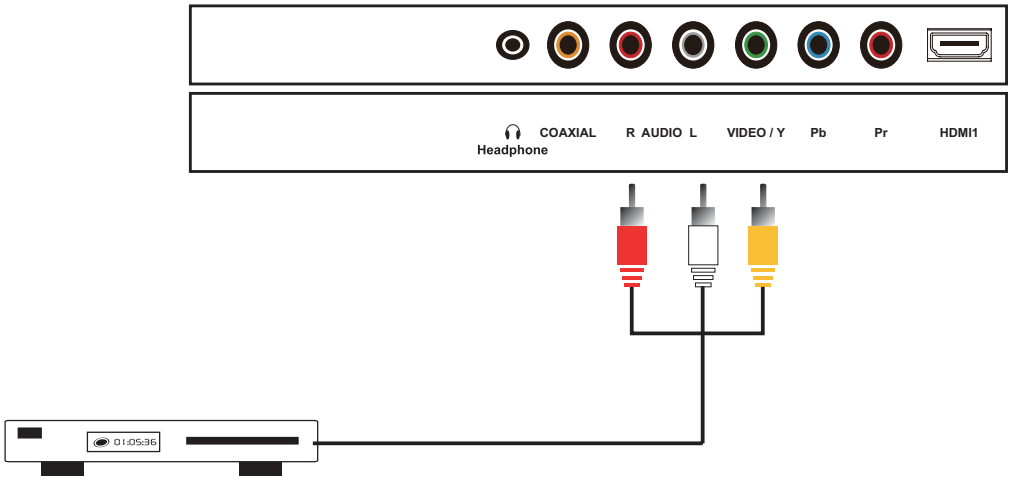

3.5. Conecting via Component Video

Connect your video player (VHS, Betamax, etc.....), decoder, DVD or similar with an RCA cable, from the YPbPr video output of the device to the YPbPr video input on your TV, as shown in Figure. Use a second RCA cable to connect.the.audio. Through this entry you can get HD video.

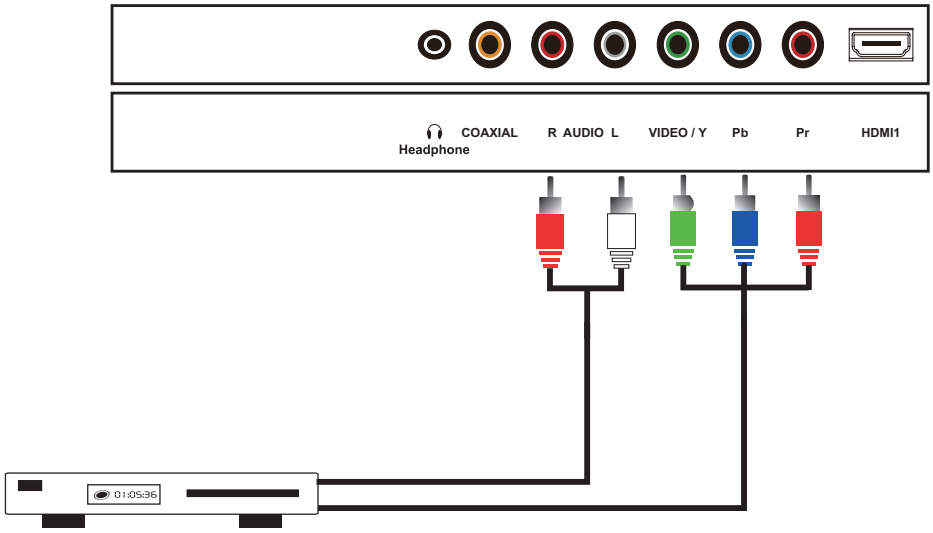

3.6. Connect to Digital Audio Amplifier

Take the coaxial digital audio output of your TV to connect to a hifi system you have, and improve your sound experience.

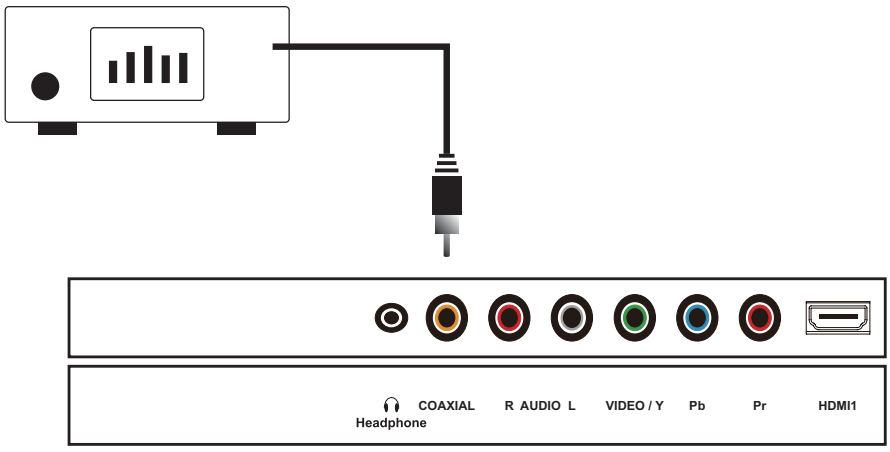

3.7. Connecting to a PC

Conect the VGA output (RGB) from your PC to the corresponding input on your TV, and the audio output from your computer to the PC AUDIO input of your television, as shown in figure.

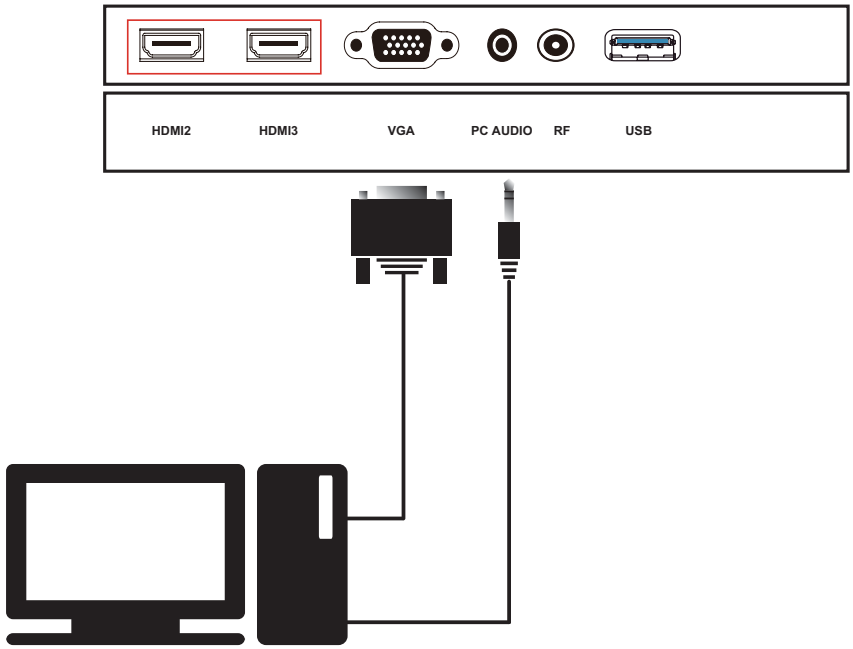

3.8. Connecting Headphones

Use the HEADPHONES output of your TV set to listen the audio of the unit through your own stereo headphones. When you connect headphones to the unit, the main speakers will be deactivated.

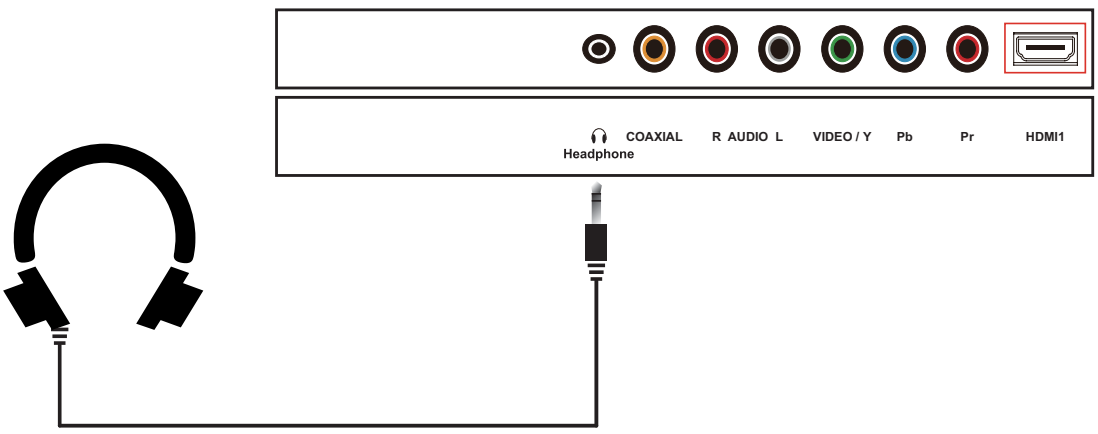

4. SELECT INPUT SOURCE

- Press INPUT button to display the input source list,
- Press ▼ / ▲ or OK button to select the input source you want to,
- Press OK button to enter the input source,
- Press EXIT button to quit.

5. First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket.

Select Language

Press ◄ / ► button to select the language to be used for menus and message.

Select Time Zone

Press ▼ / ▲ button to highlight time zone menu.

Press ◄ / ► button to select the time zone you want to.

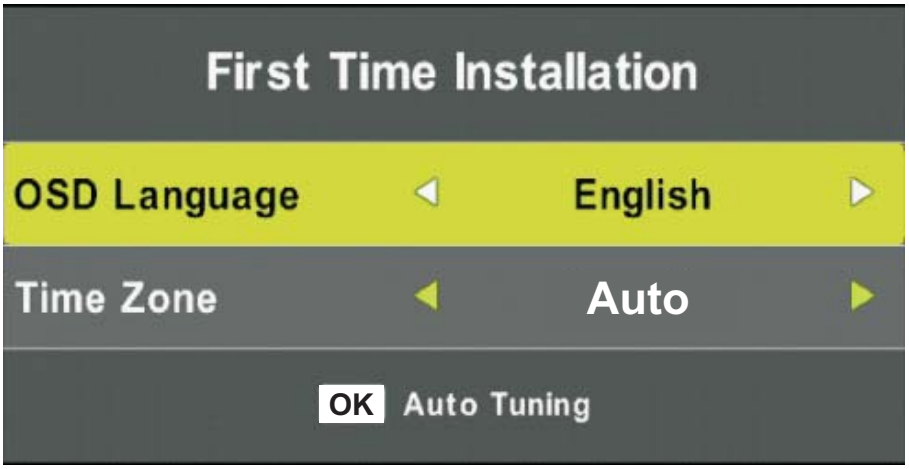

Auto Tuning Status

First tuning Air DTV, press Menu and left arrow button to skip Air DTV tuning,
Second tuning Air ATV, press Menu and left arrow button to skip Air ATV tuning.
Finally tuning Cable TV, press Menu and left arrow button to skip Cable TV tuning.

Channel Tuning
TV : 0 Programme
DTV : 0 Programme
Radio : 0 Programme
CATV : 0 Programme
25 % 73.25 MHz (TV)
Please press MENU key to skip

Channel Tuning
TV : 0 Programme
DTV : 0 Programme
Radio : 0 Programme
CATV : 0 Programme
50 % 61.25 MHz (CATV)
Please press MENU key to skip

6.Main Menu Operation

6.1 Channel Menu

Press MENU button to display the main menu.

Press ◄ / ► button to select CHANNEL in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.

2. Press Enter button to adjust.

3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Note: The channel menu is available only at Air and Cable source.

Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press Enter/► button to enter.

ATV Manual Tuning

Current CH
Set the channel number.

Color System
Select the color system
(Available System: AUTO,NTSC, PAL M, PAL N)

Fine-Turn
Adjust the frequency of the channel finely.

AFC
Automatic Fine tuning

DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press Enter button to enter sub-menu.
Press ◄ / ► button to select channel, then press Enter button to search program.

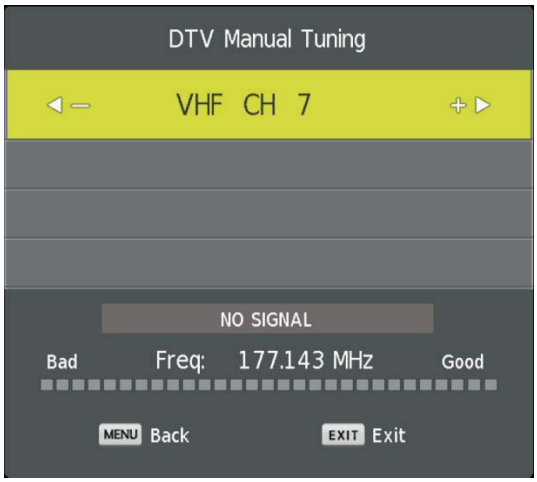

Program Edit

Press ▼ / ▲ button to select Program Edit, then press Enter button to enter sub-menu.

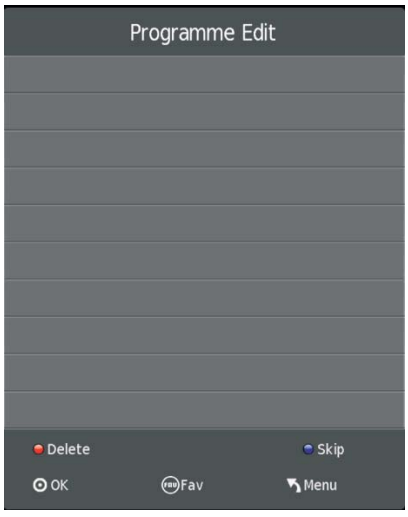

The three colored key is the shortcut key
for programming the channel.

First press▼ / ▲ to highlight the channel you want to select, then:

Press the button to add or remote the channel to your favorite list. Red

Press the button to skip the select channel.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)Blue

Schedule List

Press ▼ / ▲ button to select Schedule List, then press Enter button to enter sub-menu. It is available in source.

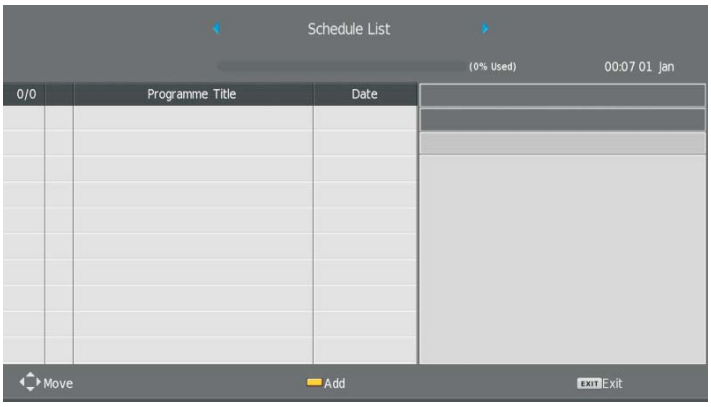

Press the YELLOW button to enter the interface below.

When the time appointment is conflict , it will produce a warning message.

Signal Information

Press ▼ / ▲ button to select Signal Information, press the Enter button to see the detail information about the signal. Only available when there is signal in DTV.

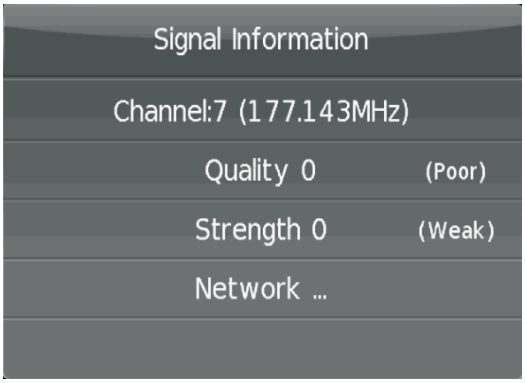

6.2 Picture Menu

Press MENU button to display the main menu.
Press ◄ / ► button to select PICTURE in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the PICTURE menu.
2. Press OK button to adjust.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press OK button to enter sub-menu. You can change the value of contrast, brightness, color, sharpness and tint when the picture is in Personal mode.
TIPS: You can press PMODE button to change the Picture Mode directly.

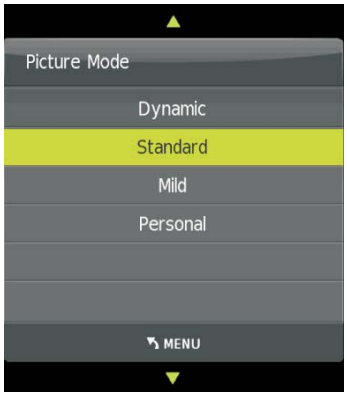

Contrast/ Brightness/ Color/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◄ / ► button to adjust.

Contrast	Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.
Brightness	Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.
Color	Adjust the saturation of the color based on your own like.
Tint	Use in compensating color changed with the transmission in the NTSC code.
Sharpness	Aadjust the peaking in the detail of the picture.

Color Temp

Change the overall color cast of the picture.
Press ▼ / ▲ button to select Color Temperature , then press OK button to enter sub-menu.
Press ◄ / ►button to select. (Available Picture mode: Cool, Medium, Warm, User).
You can change the value of red,green and blue when the color temperature is in User mode.

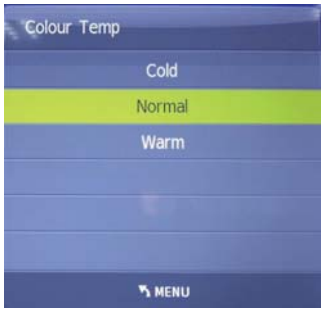

Cold	Increase the blue tone for the white.
Normal	Increase the sex-linked colors for the white.
Warm	Increase the red color for the white.
Personal	Set the white balance you like.

Noise Reduction

To filter out and reduces the image noise and improve picture quality.
Press ▼ / ▲ button to select Noise Reduction , then press OK button to enter sub-menu.

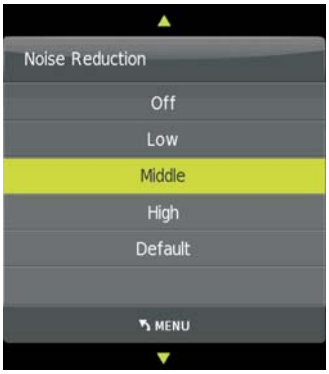

Off	Select to turn off video noise detection.
Low	Detect and reduce low video noise.
Middle	Detect and reduce moderate video noise.
High	Detect and reduce enhanced video noise.

6.3 Sound Menu

Press MENU button to display the main menu.
Press ◄ / ► button to select SOUND in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the SOUND menu.
2. Press Enter button to adjust.3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

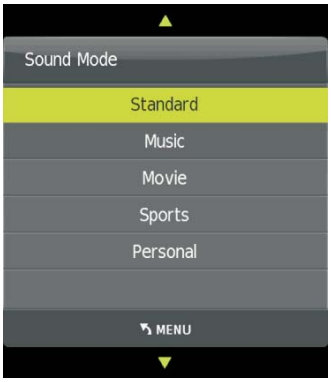

Sound Mode

Press ▼ / ▲ button to select Sound Mode, then press Enter button to enter sub-menu.
Press▼/▲ button to select.

You can change the value of Treble and Bass when the sound is in Personal mode.
TIPS: You can press SMODE button on the remote control to change the Sound Mode directly.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound.Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
Personal	Select to customize picture settings.

Note:The treble and bass are only available in User mode,you can adjust them as you like.

Balance
Press ▼ / ▲ button to select option, Press ◄ / ► button to adjust.
Auto Volume
Press ▼ / ▲ button to select Auto Volume Level, then press ◄ / ► button to select On or Off.
SPDIF Mode
Press ▼ / ▲ button to select Digital Output, then press ◄ / ► button to select Off / PCM / Auto.

NOTE:
Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.
Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

6.4 Time Menu

Press MENU buttonto display the main menu.
Press ◄ / ► button to select TIME in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the TIME menu.
2. Press Enter button I to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Clock

Press ▼ / ▲ button to select:Date/Month/Year/Hour/Minute.
Press ◄ / ► button to set up clock.

Sleep Timer

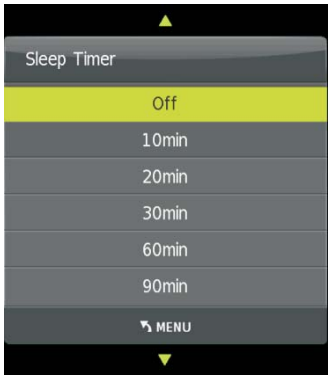

Press ▼ / ▲ button to select Sleep Timer, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select. (Available options are:Off,10min, 20min,30min,60min,90min,120min,180min,240min).

Auto Standby

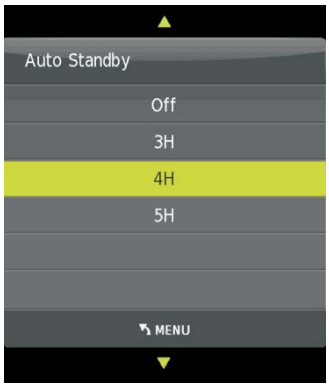

Press ▼ / ▲ button to select Auto Standby, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select.
Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset the time.

Time Zone

Press ▼ / ▲ button to select Time Zone,
then press Enter button to enter sub-menu.

Press ▼ / ▲ / ◄ / ► button to select time zone.

OSD Timer

Press ▼ / ▲ button to select OSD Timer,
then press Enter button to enter sub-menu.

Press ◄ / ► button to select.

NOTE:
The Clock will change with the area which you have selected in the Time Zone.

6.5 Lock Menu

Press MENU buttonto display the main menu.
Press ◄ / ► button to select Lock in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the LOCK SYSTEM menu.
2. Press Enter/◄ / ► button to adjust.
3. After finishing your adjustment, Press MENU button to return back to the previous menu

Lock System

Press ▼ / ▲ button to select Lock System,
then press Enter button to make the following 3 options valid.

Default password is 0000, and if forget what you set, please call the service center.

Set Password

Press ▼ / ▲ button to select Set Password,
then press Enter button to enter sub-menu to set new password.

Block Program

Press ▼ / ▲ button to select Block Program,
Press buttonto lock or unlock the program.
then press Enter button to enter sub-menu to select.Green

Parental Guidance

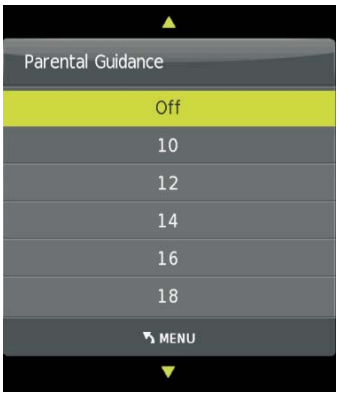

Press ▼ / ▲ button to select Parental Guidance,
then press Enter button to enter sub-menu to select the number of age which is suitable for your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◄ / ► button to select Off or On.
When Key Lock's statue is on, you can't use the Key panel button.

6.6 Setup Menu

Press MENU buttonto display the main menu.
Press ◄ / ► button to select SETUP in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the SETUP menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

OSD Language

Select an OSD menu language can be displayed.Default Portuguese is selected as menu language.

Press ▼ / ▲ / ◄ / ► button to select Menu Language.

PVR File System

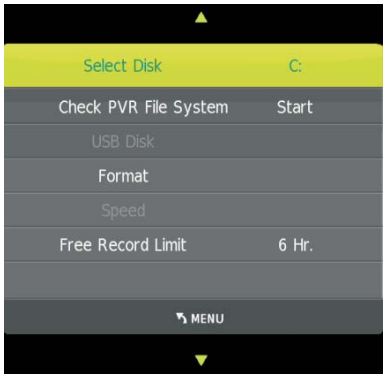

Press ▼ / ▲ button to select PVR File System, then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select Check PVR File System , then press Enter button to enter. Then it will check the USB speed.

6.7 EPG Menu

Press the button EPG to enter EPG menu.

Press the RED button to switch to PVR mode.
You can choose the time of the appointment to record you want.
Press the GREEN button to set the remind time.
Press the YELLOW button to see the pre-day EPG information.
Press the BLUE button to set the next.-day EPG information

6.8 Record

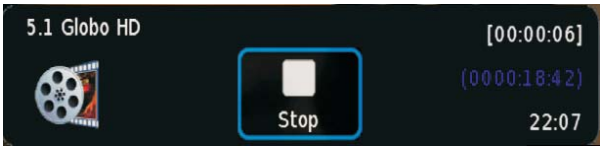

Press RECORD button to record the current program.

Press STOP button to stop recording,
then it will return to normal broadcast television.

If you press the POWER button when you are recording, the menu(on the left) will show up

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio,
then press Enter button to enter sub-menu.

Press ▼ / ▲ button to select the available display format.

Blue Screen

Press ▼ / ▲ button to select Blue Screen, then press Enter button to select On or Off.

First Time Installation

Press ▼ / ▲ button to select First time installation, then press Enter button to enter.

Caption

Press ▼ / ▲ button to select Caption, then press Enter button to enter.

Reset

Press ▼ / ▲ button to select Reset, then press Enter button to enter sub-menu.

6.9 Channel Menu

Press INPUT button to select ATV.
Press MENU buttonto display the main menu.
Press ◄ / ► button to select CHANNEL in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Auto Tuning
Press ▼ / ▲ button to select Auto Tuning, then press Enter button to start auto search.

ATV Manual Tuning
Press ▼ / ▲ button to select Analogue Manual Tuning, then press Enter button to enter sub-menu.

Program Edit
Press ▼ / ▲ button to select Program Edit, then press Enter button to enter sub-menu.

Notes:
1. Schedule List in CHANNEL option is invalid.
2. PICTURE menu and description are the same as that for Air mode.
3. AD Switch in SOUND option is invalid.
4. TIME menu and description are the same as that for Air mode.
5. Parental Guidance in LOCK option is invalid.
6. Audio Languages, Subtitle Language, Hearing Impaired and PVR File Systemin SETUP option is invalid.

6.10 Screen Menu

Press MENU button to display the main menu.
Press ◄ / ► button to select SCREEN in the main menu.

1. Press ▼ / ▲ button to select the option that you want to adjust in the SCREEN menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

Auto Adjust
Press Enter button to start adjusting H-Offset/V-Offset/Size/Phase automatically.

H-Offset
Adjust the horizontal position of the picture.
Press ▼ / ▲ button to select H-Offset, then press Enter button to enter sub-menu.

V-Offset
Adjust the vertical position of the picture.
Press ▼ / ▲ button to select V-Offset, then press Enter button to enter sub-menu.

Size
Adjust the display size.
Press ▼ / ▲ button to select Size, then press Enter button to enter sub-menu.

Phase
Adjust the horizontal interfering lines.
Press ▼ / ▲ button to select Phase, then press Enter button to enter sub-menu.

Position Reset
Press ▼ / ▲ button to select Position Reset, then press Enter button to enter.

Notes:
1. Noise Reduction in PICTURE option is invalid.
2. AD Switch in SOUND option is invalid.
3. TIME menu and description are the same as that for Air mode.
4. Block Program and Parental Guidance in LOCK option is invalid.
5. Audio Languages, Subtitle Language, Hearing Impaired and PVR File System in SETUP option is invalid.
6. PC mode has no CHANNEL menu.

7. Media OPERATION

Note: Before operating Media menu,Plug in USB device,then press INPUT button to set the Input Source to Media . Press button to select ▼ / ▲Media in the Source menu, then press Enter button to enter.

Press ◄ / ► button to select the option you want to adjust in the main Media menu, then press Enter button to enter.

7.1 Photo Menu

Press ◄ / ► button to select PHOTO in the main menu, then press Enter button to enter.
Press Exit button to return to the previous menu and exit menu to quit.

Press ◄ / ► button to select the file you want to watch in the file selecting menu,
then press media button to display picture.

When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

Press ◄ / ► button to view all operation buttons.

7.2 Music Menu

Press ◄ / ► button to select MUSIC in the main menu, then press Enter button to enter.
Press Exit button to return to the previous menu and exit menu to quit.

Press ◄ / ► button to select drive disk you want to watch, then press button to enter.Enter
Press ◄ / ► button to select return option to the previous menu.
When highlighting the option you select, the file information will appear on the right and music will be previewed in the center.

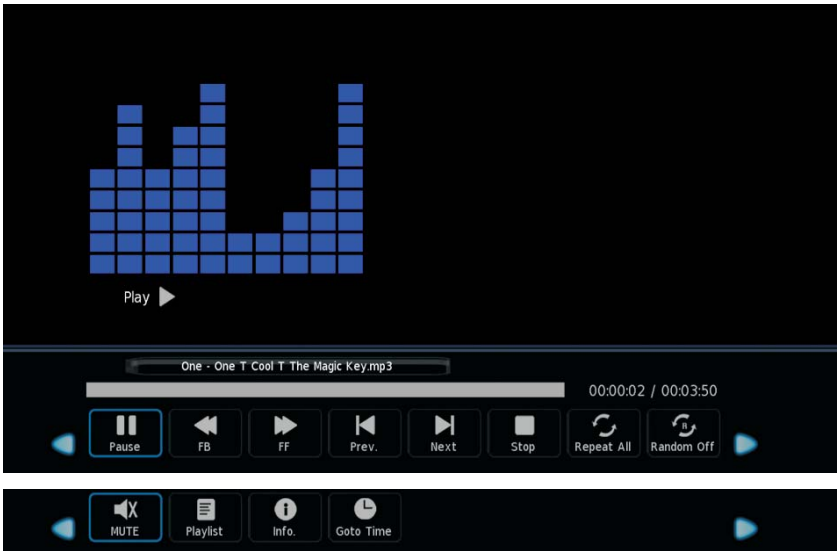

Press ◄ / ► button to view all operation buttons.

7.3 Movie Menu

Press ◄ / ► button to select MOVIE in the main menu, then press Enter button to enter.
Press Exit button to return to the previous menu and exit menu to quit.

Press ◄ / ► button to select drive disk you want to watch, then press Enter button to enter.
When highlighting the option you select, the file information will appear on the right and movie will be previewed in the center.
Press media button to play the selected movie.
Press display button to select menu in the bottom you want to run, then press Enter button to operate.
Press Exit button to back to the previous menu and exit button to quit the entire menu.

Press ◄ / ► button to view all operation buttons.

7.4 Text Menu

Press ◄ / ► button to select TEXT in the main menu, then press Enter button to enter.
Press Exit button to return to the previous menu and exit menu to quit.

Press ◄ / ► button to select drive disk you want to watch, then press Enter button to enter.
Press ◄ / ► button to select return option to back to the previous menu.

When highlighting the option you select, the file information will appear on the right and movie will be previewed in the center.

8. TROUBLESHOOTING

If the device performance fails, check whether the detected problem is in the following table. If your device still fails, contact the customer service.

SYMPTOM	CAUSE	SOLUTION
Not work: The front LED does not shine.	The TV is not plugged to power source.	Check all connections to the TV.
Not work: The LED shine in red.	The TV is still in Standby mode.	Press both the POWER key on the remote control like in the front panel.
Blue screen.	No signal. The selected input source is wrong.	Press A/V to select the correct source.
Noise, distortion, “ghosting” effect (TV).	Poor antenna signal.	If you are using a portable antenna, try moving the antenna. Check all antenna connections.
No sound.	“Mute” enable.	Disable the “Mute”.
	Volume too low.	Check the volume.
	External Amplifier disconnected (if you are using).	Check the connection to the external amplifier.

9. SPECIFICATIONS

Screen

Model	TLD-1111-40
TV System	NTSC/ISDB-T
Maximum Resolution	1920x1080
Brightness	260cd/m^2
Static Contrast	5000:1
Response Time	8.5ms
Consumption	75W
Power Supply	100-240V AC, ~50/60Hz
Connectivity	Composite Video Input Component Video Input YPbPr Audio Input (R/L) PC Video Input (VGA) PC Audio Input HDMI Input RF Antenna Input (75Ω Unbalanced)
	Headphones Audio Output Coaxial Digital Audio Output
Data Interface	USB2.0 Host Port
Supported System Files	NTFS, FAT32 and FAT16

Remote Control

Signal Type	Infrared
Control Distance	7 meters
Control Angle	30º (Horizontal)
Power Supply	AAA 1.5V